INSTALLATION INSTRUCTIONS FOR THE HEAT SHIELD

FOR FURNITURE DOORS

T.classic

T.lacq

T.acrylic

T.segment


T.effect*

FENIX NTM®

GLAKS




To prevent damage caused by excessive heat (peeling of the foil/front material), we recommend installing a heat shield inside the cabinet.

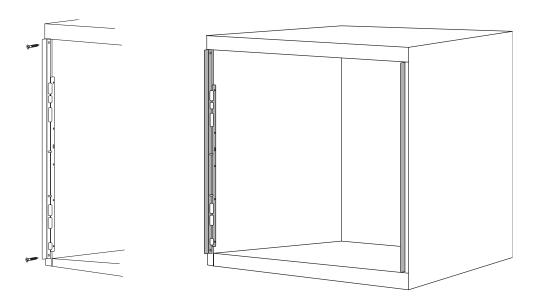

- "Z" profiles are installed inside, on the right and left sides of the stove cabinet, using screws precisely at its bottom edge.
- "L" profiles are placed on the sides behind the built-in oven and secured with screws.
- Installation of the appliance follows the installation of the shield.
- If the holes in the shield do not match the oven holes, new holes can be drilled.
- It is essential to follow the installation instructions of the electrical appliance manufacturer.

Recommended Maintenance Instructions:

Use only mild cleaning agents and a soft cloth or sponge to clean the surfaces.

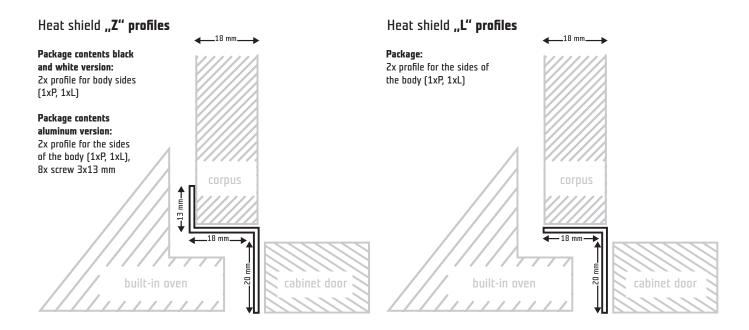

Marking	Implementation
Protective heat shield – 2x "Z" profile	aluminium
Protective heat shield – 2x "Z" profile	white (RAL 9003 - matt)
Protective heat shield – 2x "Z" profile	black (RAL 9005 – matt)
Protective heat shield – 2x "L" profile	stainless steel